


1. Remove insulating tubing covering solder joints between TS-70B Thermistor and shielded cable.
2. Remove inner insulating tubing covering solder joints between TS-70B Thermistor and inner-conductor of shielded cable.
3. Unsolder broken thermistor and solder on replacement thermistor.
4. Replace inner and outer insulation tubing with electrical tape or heat shrink tubing.

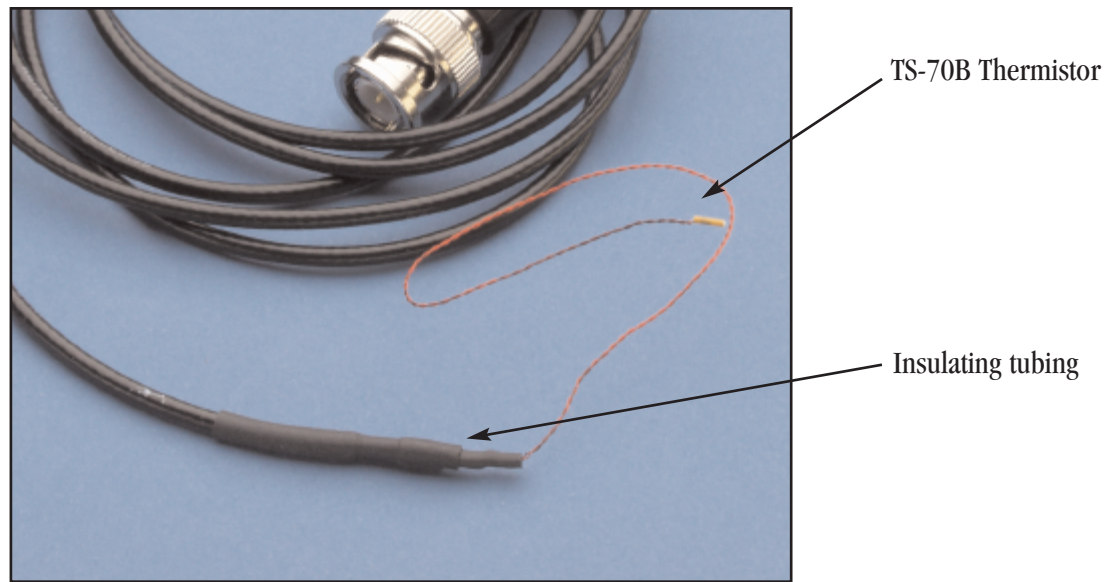

TA-29 Cable with Bead Thermistor

